

kristensen:kristensen®

GUIDE — (ENG)

HINGED DOORS ADJUSTMENT


—



HINGED DOORS ADJUSTMENT

All of our storage furniture has been adjusted from the factory, but an uneven surface or small shakes during transport may cause the need to make smaller adjustments upon receipt.

When adjusting the drawers, it is important to start from one end and then systematically adjust from this starting point.

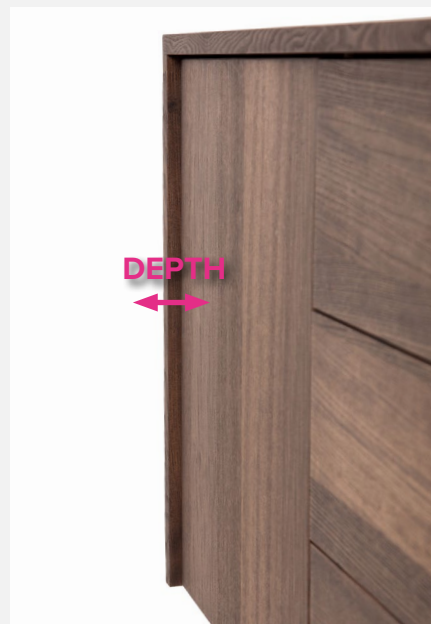


DOOR ADJUSTMENT: WIDTH



With this screw the doors can be adjusted in the width. Close the door and check if the distance fits - repeat the adjustment until the desired result is achieved.

DOOR ADJUSTMENT: UP/DOWN

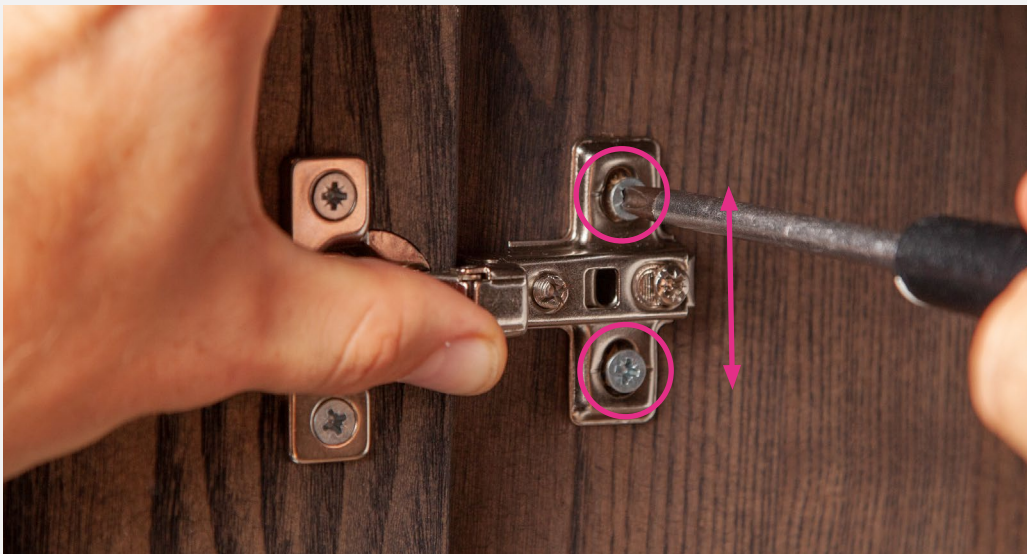

By loosening the screws on all the hinges of the door, these can be adjusted up and down by pushing the bracket in the clearance. Once the desired location is achieved hold the door and tighten the screws again.

DOOR ADJUSTMENT: DEPTH



1: With this screw, the depth of the doors can be adjusted in the hinge side, both in the top and bottom. Start by loosening the marked screw slightly.



2: Gently push/slide the door in the desired direction and tighten the screw again. Repeat the process on all hinges if necessary. Then close the door and check if the distance is as desired - repeat the adjustment until the desired result is achieved.



3: On the opposite side of the door, the regulating pin can also be adjusted in or out on the push mechanism to achieve the desired result. ***NB: Never screw the regulating pin fully in, as the push mechanism does not work then and the door may be difficult to open again!***

kristensen:kristensen®

—

Kristensen & Kristensen
Storstrømsvej 44
6715 Esbjerg

—

+45 75470303
kristensen@kristensen.com
www.kristensen.com