

kristensen:kristensen®

GUIDE — (ENG)

PUSH LATCH ADJUSTMENT

—




PUSH LATCH ADJUSTMENTS

When receiving furniture with a push latch system, the regulating pin must be retrofitted. The regulating pin is in the bag along with the instructions/ screws.



BEFORE

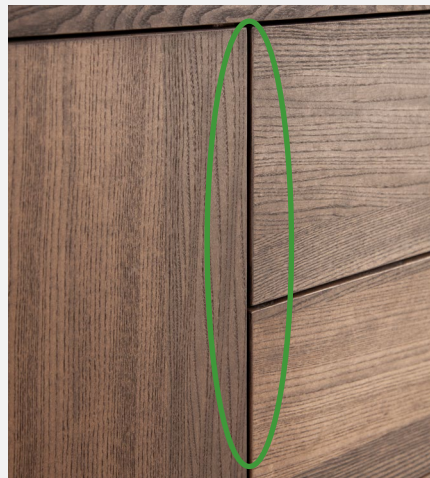

AFTER

MOUNTING THE REGULATION PIN



The regulating pin is mounted by screwing it onto the bracket.

NB: Never screw the regulating pin fully in, as the push mechanism does not work then and the door may be difficult to open again!

ADJUSTING THE REGULATION PIN



Screw the regulating pin further in or out to adjust the depth of the door. Close the door and check if the surface is level - repeat the adjustment until the desired result is achieved.

kristensen:kristensen®

—

Kristensen & Kristensen
Storstrømsvej 44
6715 Esbjerg

—

+45 75470303
kristensen@kristensen.com
www.kristensen.com