

kristensen:kristensen®

GUIDE — (ENG)

# ADJUSTMENT OF HINGES ON CABINET DOORS

—



# ADJUSTMENT OF HINGES ON CABINET DOORS

---

All of our storage furniture has been adjusted from the factory, but an uneven surface or small vibrations during transport may mean that the furniture needs to be slightly adjusted again when you receive it.

*When adjusting doors, it is important to start from one end and systematically adjust from this starting point.*






### ADJUST THE DOOR WIDTH



With this screw, the width of the doors can be adjusted. Close the door and check if the distance fits - repeat the adjustment until the desired result is achieved.

### ADJUST THE DOOR UP/DOWN

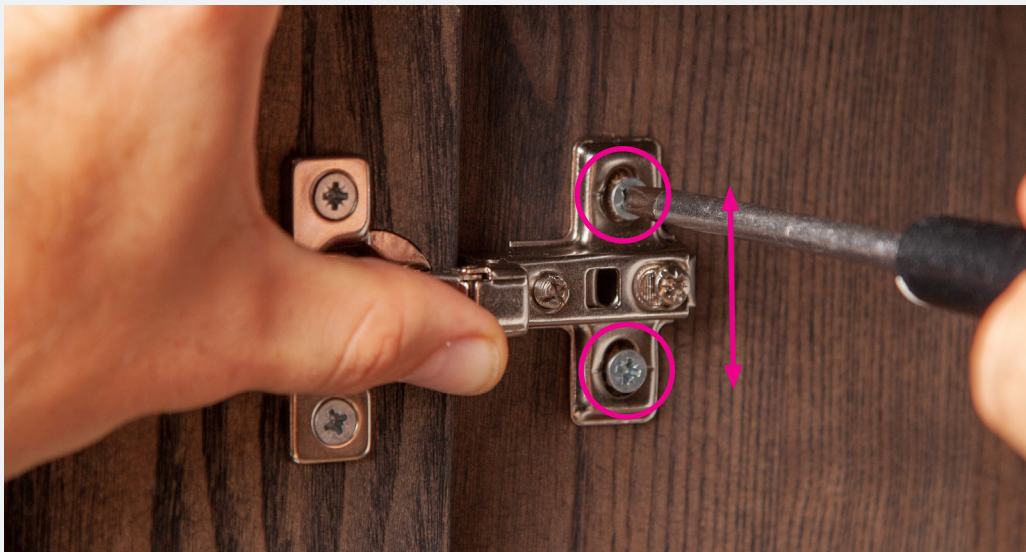

By loosening the screws on **all the door hinges**, the doors can be adjusted up and down by moving the fitting into the free space. When the desired position is achieved, tighten the screws again.

## ADJUST THE DOOR IN DEPTH



**1:** With this screw, the doors can be adjusted in depth on the hinge side both above and below. Start by slightly loosening the marked screw.



**2:** Then gently pull/push the door in the desired direction and tighten the screw again. Repeat the process on all hinges if necessary. Then close the door and check if the distance is as desired - repeat the adjustment until the desired result is achieved.





**3:** On the opposite side of the door, the adjustment pin can also be adjusted in or out on the push mechanism to achieve the desired result.

***NB: Never screw the adjustment pin all the way down, as the push mechanism does not work all the way inside and the door can be difficult to open again!***

**kristensen:kristensen®**

—

Kristensen & Kristensen  
Storstrømsvej 44  
6715 Esbjerg

—

+45 75470303  
kristensen@kristensen.com  
www.kristensen.com