

kristensen:kristensen®

GUIDE — (ENG)

# DRAWER ADJUSTMENT

—



# ADJUSTING: DRAWER WIDTH

---

All of our storage furniture has been adjusted from the factory, but an uneven surface or small shakes during transport may cause the need to make smaller adjustments upon receipt.

*When adjusting the drawers, it is important to start from one end and then systematically adjust from this starting point.*



BEFORE



AFTER



**1:** Locate the bracket on the bottom of the drawer.



**2:** To adjust the drawer left / right, scroll on the displayed wheels on both the right and left sides simultaneously. Close the drawer and check if the distance fits - repeat the adjustment until the desired result is achieved.

# ADJUSTING: DRAWER HEIGHT

---

All of our storage furniture has been adjusted from the factory, but an uneven surface or small shakes during transport may cause the need to make smaller adjustments upon receipt.

*When adjusting the drawers, it is important to start from one end and then systematically adjust from this starting point.*




BEFORE



AFTER



**1:** Locate the bracket on the bottom of the drawer.

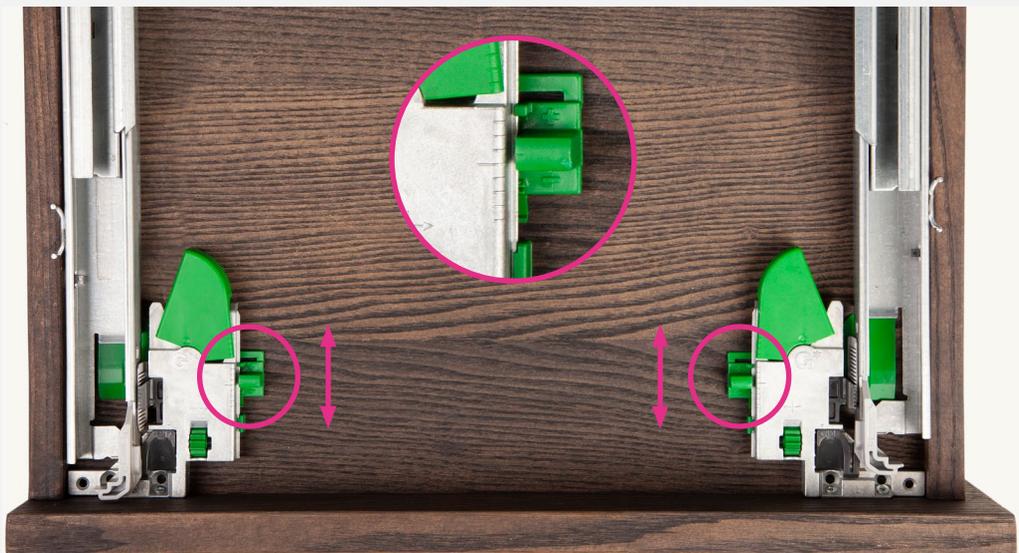

**2:** Push or pull the selected adjustment knob to raise or lower the drawer front. There are marked steps on the brackets, so that both sides can be adjusted equally. Close the drawer and check if the distance fits - repeat the adjustment until the desired result is achieved.

# ADJUSTING: DRAWER DEPTH

---

All of our storage furniture has been adjusted from the factory, but an uneven surface or small shakes during transport may cause the need to make smaller adjustments upon receipt.

*When adjusting the drawers, it is important to start from one end and then systematically adjust from this starting point.*



BEFORE




AFTER

## REMOVING THE DRAWER



1: Locate the bracket on the bottom of the drawer.

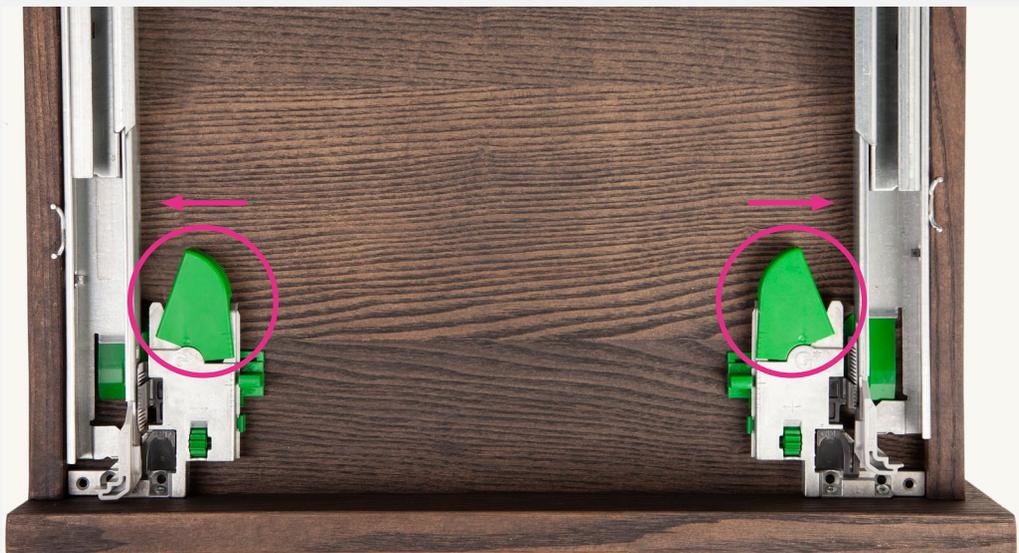

2: Simultaneously press and hold the selected handles to release the drawer.




**3:** Hold down the handles and pull out the drawer while lifting it lightly.

#### **ADJUSTING THE DRAWERS DEPTH**



**4:** Locate the scroll wheels located at the rear of both brackets. Roll the wheel in the side(s), where the drawer needs to be moved in or out.

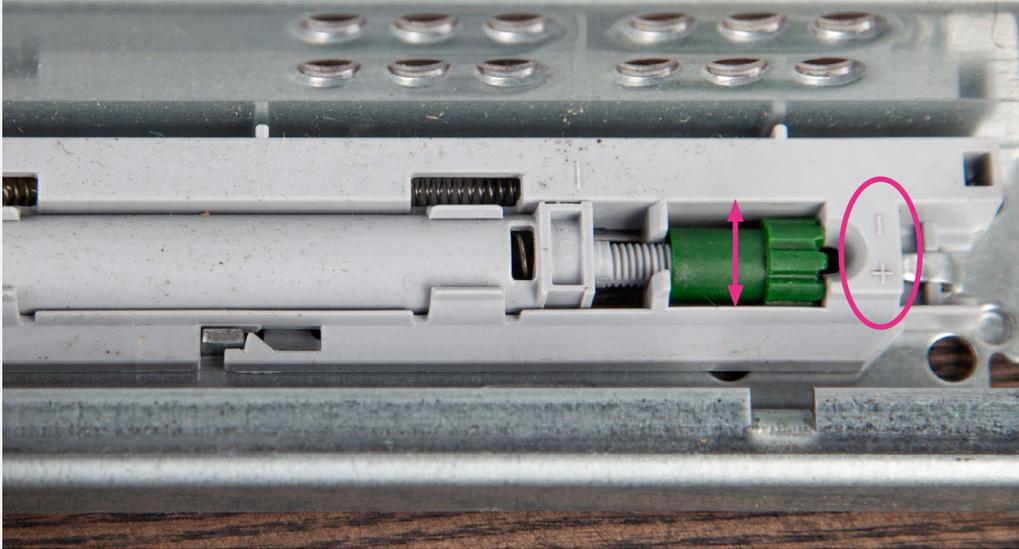

**5:** Roll the wheel against the '-' = Drawer front is moved further in.  
 Roll the wheel against the '+' = Drawer front is moved further out. *See selection above.*  
 Install and close the drawer and check if the front is level with the other drawers/doors - repeat the adjustment until the desired result is achieved.

### **MOUNTING THE DRAWER**



**6:** The drawer is mounted again by making sure that the extension rails is placed on the inner side of the drawer and that the small holes on the back of the drawer, slides into the hooks on the extension rail.



**7:** Make sure to angle the drawer when pushing it back in. Then lower the drawer front down on the extension rails.



**8:** When the drawer is properly placed on the extension rails, pull the hooks so that the spacer is pushed all the way to the front.



**9:** The drawer is now properly mounted.

**kristensen:kristensen®**

—

Kristensen & Kristensen  
Storstrømsvej 44  
6715 Esbjerg

—

+45 75470303  
kristensen@kristensen.com  
www.kristensen.com